




HTC Touch Pro CDMA USB Logic Board Replacement

Step by step guide to get replace the USB logic board of HTC Touch Pro.

Written By: Zhaowei Zhang

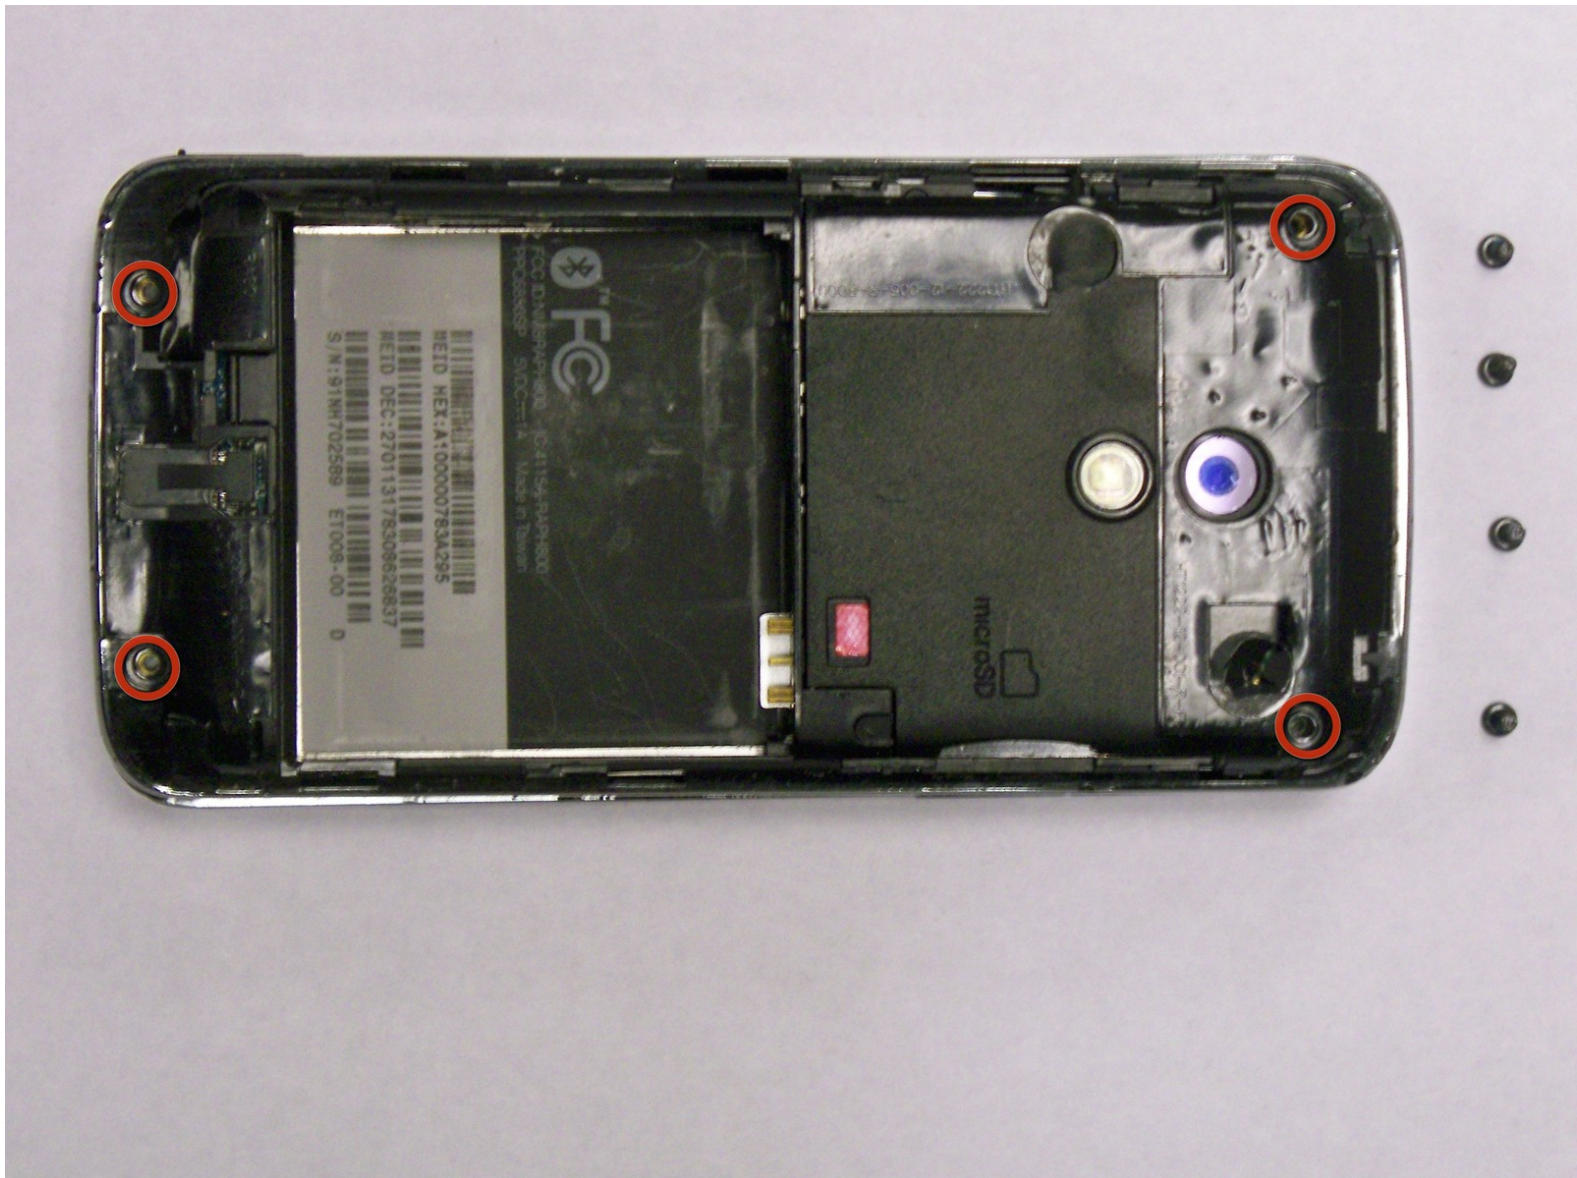

INTRODUCTION

Replacement of the HTC Touch Pro's usb logic board.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery




- Gently press on back plate, push toward camera direction.

Step 2




- Use finger to lift up an edge of battery.

Step 3 — USB Logic Board

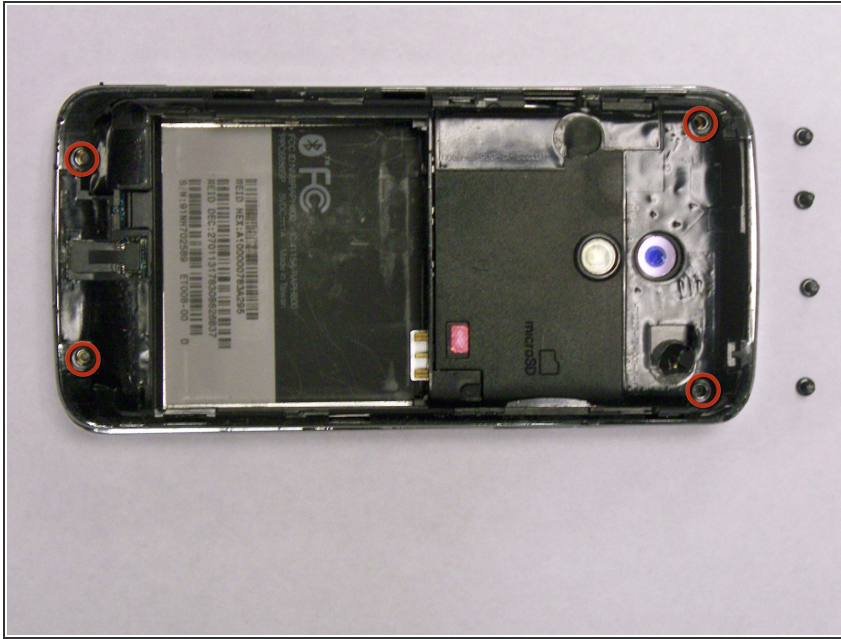


- Remove 4 screws circled in red using T6 screw driver.

Step 4

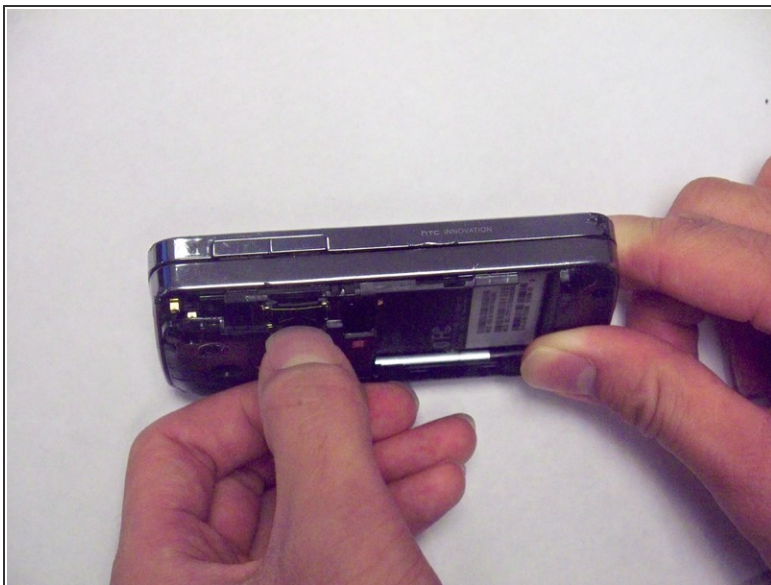


- Lift plastic cover near Memory card slot.

Step 5

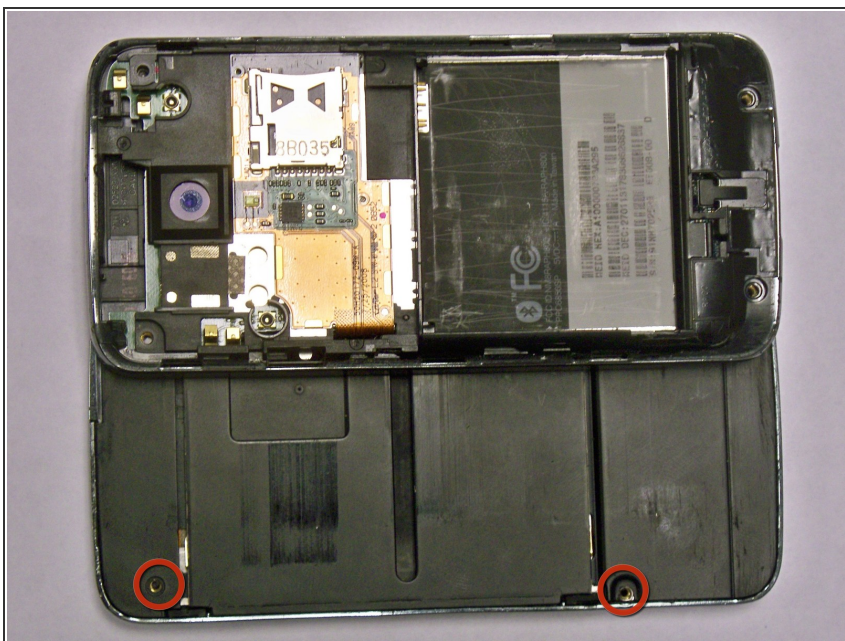



- Remove two Phillips #00 screws from the backside of the screen.

Step 6

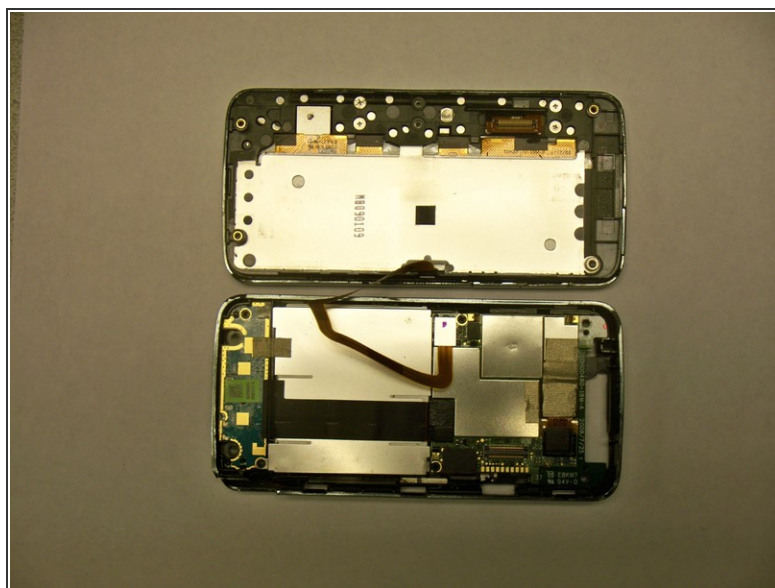



- Insert a spudger or plastic opening tool into the seam on the side of the phone.
- Gently pry apart the two halves of the phone.
- Work your way around the phone until the two halves separate.

Step 7

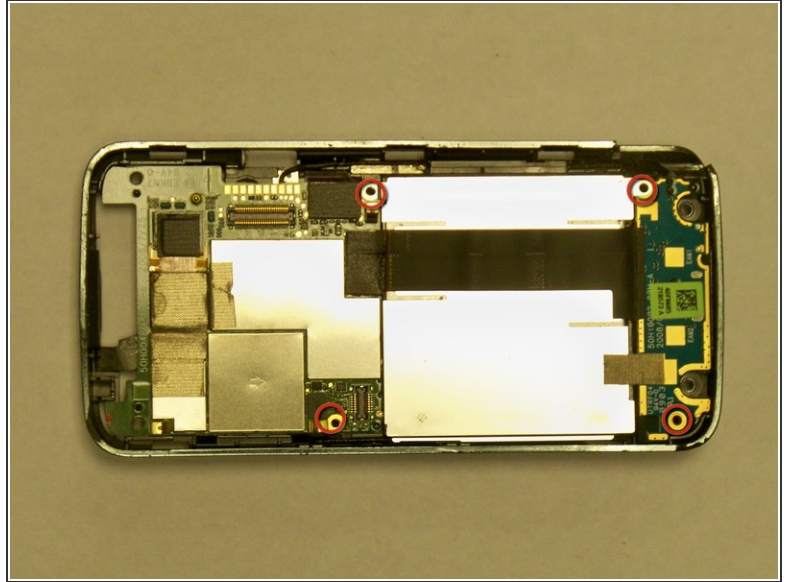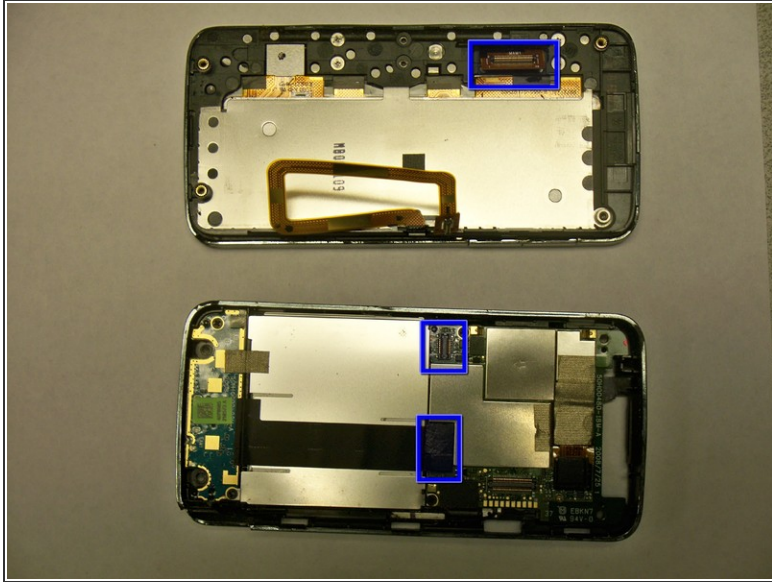

- Gently unplug connectors marked with blue rectangle.
- Remove screws circled in red with 00 Phillip screw driver.

Step 8

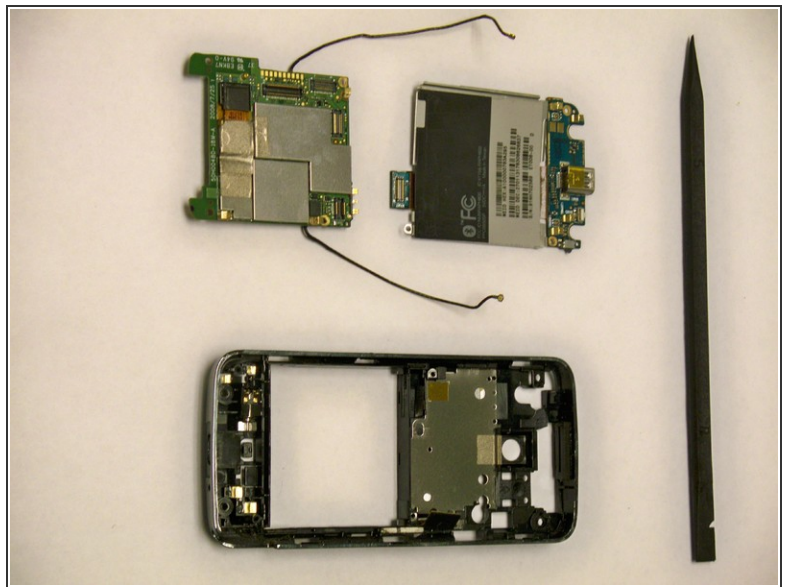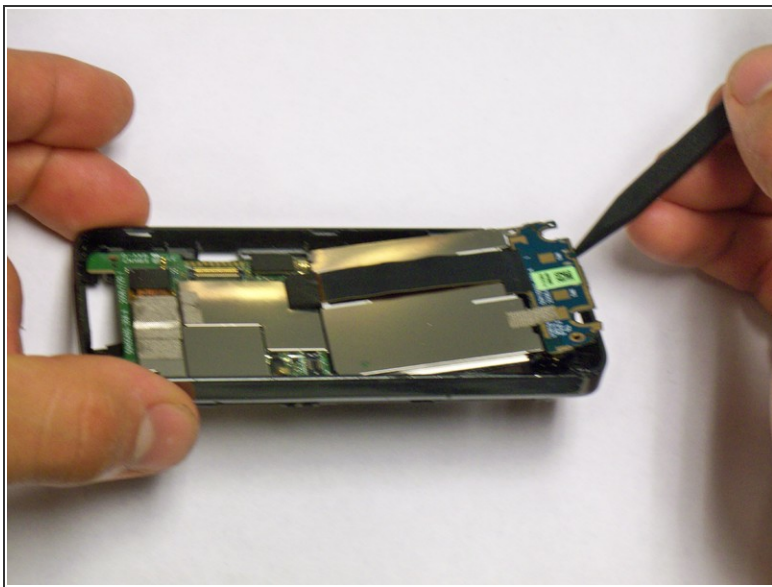

- Gently lift logic board using plastic opener tool.

⚠ Be aware of antenna

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 09:55:21 AM.